




AT THE FIRST OPERATION IT IS RECOMMENDED TO READ THE COMPLETE INSTRUCTION MANUAL TO PREVENT ANY DAMAGE TO THE PRODUCT

SOLO

No need of configuration.

ADVANCED




Set the units through dip switch following the instructions below, in case of single unit, set as a MASTER.

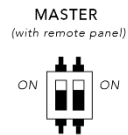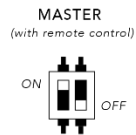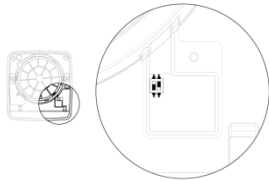

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5
MASTER	SLAVE OPPOSITE TO MASTER	SLAVE SAME AS MASTER	SLAVE OPPOSITE TO MASTER	ETC...


WIRELESS

Set the units through dip switch following the instructions below, in case of single unit, set as a MASTER.

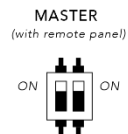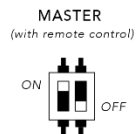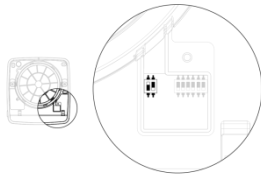

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5
MASTER	SLAVE OPPOSITE TO MASTER	SLAVE SAME AS MASTER	SLAVE OPPOSITE TO MASTER	ETC...


Enter a single coding for any system, so as to avoid any interference with other close units nearby installed, setting through dip switch as per instructions below:

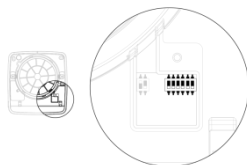


AT THE FIRST OPERATION IT IS RECOMMENDED TO READ THE COMPLETE INSTRUCTION MANUAL TO PREVENT ANY DAMAGE TO THE PRODUCT

SOLO

Unit connection:

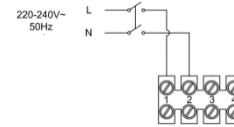


Connection with wall controls (do not provided):

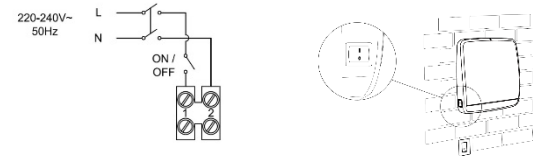


The switch on the unit must be placed as picture shows.

Advanced

Single unit connection:

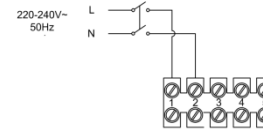


MASTER-SLAVE system connection:

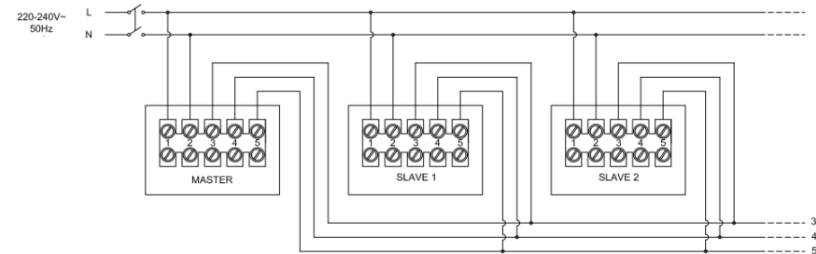

WIRELESS

Unit connection:

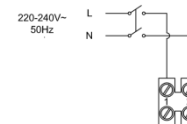








 



 

 

 


Ambientika – QUICK INSTRUCTIONS FOR USE

AT THE FIRST OPERATION IT IS RECOMMENDED TO READ THE COMPLETE INSTRUCTION MANUAL TO PREVENT ANY DAMAGE TO THE PRODUCT

SOLO
0/1 (ON/OFF) Switch. Remote control to select speed and turn ON/OFF the unit.

ADVANCED AND WIRELESS

Mode \ Features	Button for selection	Screen display	Humidity sensor	Twilight sensor	Shutter	Standard operation	Operation in alarm
AUTOMATIC			Activated	Activated	Open	Heat recovery	Extraction
SURVEILLANCE			Activated	Activated	Closed	Standby	Extraction
MANUAL			Not activated	Not activated	Open	Heat recovery	Not activated
NIGHT			Not activated	Not activated	Open	Heat recovery	Not activated
TIMED EXTRACTION			Not activated	Not activated	Open	Extraction	Not activated
MASTER SLAVE AIR FLOW			Not activated	Not activated	Open	Air flow	Not activated
SLAVE MASTER AIR FLOW			Not activated	Not activated	Open	Air flow	Not activated
EXTRACTION			Not activated	Not activated	Open	Extraction	Not activated
INTAKE			Not activated	Not activated	Open	Intake	Not activated